

Reliable  
**CLOUD BASED**  
BIOMETRIC SOLUTIONS

Has the Lack of Reliability, Cost and Complexity put you off biometrics?

Then here is the solution!


iPulse has developed a solution to deal with the historical problems often associated with biometrics by building a product that can be supported remotely, is intuitive to use and competes favorably with card systems on price. It can also be easily integrated with most existing access control systems via simple wiegand protocols.



Single ethernet cable to our secure relay included with every reader

Optional HID card reader  
- Prox, MIFARE/DESFire, iClass Seos & SE

FIPS compliant sensor with 10 000:1 matching in sub 1 sec. 1 million logs stored on device

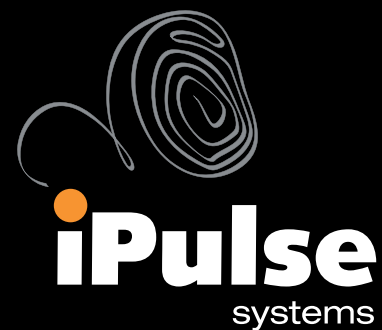

**ABOUT IPULSE** iPulse delivers a biometrics access control solution in a primary growth market that is easy to use, quick to install and affordably priced against existing legacy systems. The system is scalable and can be used as easily in a single door application as it can in a multi-door multi-site environment. The architecture makes it easy to support and is low risk to resellers and/or users with many sites.



## SYSTEM ARCHITECTURE

A simple Cat5 cable carries power, communications and inputs to the reader, both POE and 12V DC options are available. Enrollment and management can be handled on site or remotely via the IQSuite.Cloud application running on a PC. The solution is ideally suited for distributed organizations who require central control/visibility over geographically spread operations. The intuitive platform makes the solution as easy to use for a single door environment as it is for a multi-door multi-site user. Reporting makes the application as useful for access control as it does for workforce management giving you full live visibility of what is happening in your business.



## **IQSUITE.cloud** COMPATIBLE

IQSuite.cloud is the software application that drives the system. Whether it is used as a stand alone system, or integrated into other platforms, IQSuite is where devices, people and configurations are managed.

Log in from anywhere to a dashboard-driven interface that shows you instantly whether your system is experiencing any problems. Drill down to find out exactly what is wrong - our exception based dashboard allows you to identify and resolve problems in moments.

Built from the ground up to be an IP-based solution, iPulse products still support legacy communications through our IntelliRelay architecture, bringing Wiegand and RS-485 into the modern world. Whilst designed as an always-on, Internet solution, all iPulse products function perfectly in an offline world.



### Contact us

w [www.ipulsesystems.com](http://www.ipulsesystems.com) t +27 (860) 478-573  
e [info@ipulse.co.za](mailto:info@ipulse.co.za) a Kempton Park, SA